455E.book Page 1 Thursday, March 20, 2003 7:44 PM

Panasonic

Digital Cordless Phone

Operating Instructions

Model No. **KX-TCD455E**

Contents

Preparation
- Before Initial Use....2
- Important Information....3
- Setting up....4

Cordless Telephone
- Using the Telephone....8
- Making Calls....11
- Caller ID....12
- Phonebook....14
- SMS Feature (Text Messaging)....22
- Handset Settings....31
- Base Unit Settings....37
- Initial Settings....39
- Multi-unit User Operation....41
- Intercom....45
- Walkie-Talkie....46

Useful Information
- Before Requesting Help....49
- Technical Information....52
- Index....53
- Guarantee....54

Preparation

Cordless Telephone

Useful Information

Caller ID and SMS Compatible

SMS

PLEASE READ BEFORE USE AND SAVE.

Charge the battery for about 7 hours before initial use.

Before Initial Use

Thank you for purchasing your new Panasonic digital cordless telephone.

- Order accessory items for all Communications Products with ease and confidence either by telephoning our Customer Care Centre on:
  08700 100 076 Monday - Friday 9:00am - 5:30pm
  Or go on line through our Internet Accessory ordering application at shop@Panasonic **http://www.panasonic.co.uk**
- Most major credit and debit cards accepted.
- All enquires transactions and distribution facilities are provided directly by Panasonic UK Ltd.
- It couldn't be simpler!

Dear purchaser,
You have acquired a KX-TCD455E, which is a product made in regard with the Digital Enhanced Cordless Telecommunications (DECT). DECT technology is characterized by high-security protection against interceptions as well as high-quality digital transmission. This telephone was designed for a wide range of applications. For example, this telephone can be used within a network of base units and handsets, constituting a telephone system which:

- operates up to 6 handsets at one base unit.
- allows an intercom between 2 handsets.
- allows the operation of a handset at up to 4 base units, expanding the communication radio area.

Caller ID Service, where available, is a telephone company service. After subscribing to Caller ID, this phone will display the caller's phone number.

Accessories (included)

☐ AC Adaptor
PQLV19EZ

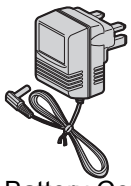

☐ Telephone Line Cord
PQJA87S (for UK)

☐ Rechargeable Batteries
(AAA size)
HHR-4EPT/BA2 (P03P)

☐ Battery Cover
PQKK10134Z5

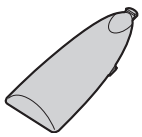

☐ Belt Clip
PQKE10355Z1
(Dark Metallic)

Additional accessories are available for purchase. Contact your Panasonic Customer Care Helpline for further details. U.K. 08700 100 076 R.O.I. 01289 8333

Important Information

Only use the power supply included with the product.
Do not connect the AC Adaptor to any AC outlet other than the standard AC220-240 V.
The apparatus is approved for use with PQLV19EZ power supply.
This apparatus is unable to make emergency telephone calls under the following conditions:

- The portable handset batteries need recharging, or have failed.
- During a mains power failure.
- When the Key Lock is set to ON.
- When the unit is in Direct Call mode.

Do not open the base unit or handset (other than to change the batteries).
This apparatus should not be used near emergency/intensive care medical equipment and should not be used by people with pacemakers.
Care should be taken that objects do not fall onto, and liquids are not spilled into the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration or shock.

Environment

Do not use this unit near water.
This unit should be kept away from heat sources such as radiators, cookers, etc. It should also not be placed in rooms where the temperature is less than 5 °C or greater than 40 °C.
The AC Adaptor is used as the main disconnect device. Ensure that the AC outlet is located/installed near the unit and is accessible.

WARNING:
TO PREVENT THE RISK OF ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY OTHER TYPE OF MOISTURE.

Battery Caution

Use only specified batteries.
Only use rechargeable batteries.
Do not mix old and new batteries.
Do not dispose of batteries in a fire, as they may explode.
Check local waste management codes for special disposal instructions.
Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
Exercise care in handling the batteries in order not to short the batteries with conductive materials such as rings, bracelets and keys.
The batteries and/or conductor may overheat and cause burns.
Charge the batteries provided in accordance with the information given in this operating guide.

Location

- For maximum distance and noise-free operation, place your base unit:

- Away from electrical appliances such as TVs, radios, personal computers or other phones.
- In a convenient high and central location.

Setting up

Connection

Do not connect the telephone line cord to the phone socket **4** until the handset is fully charged.

Plug in the AC adaptor and the telephone line cord in order **1**, **2**, **3**.
(Switch on AC mains outlet.)

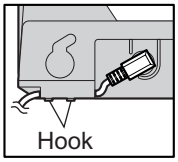

Fasten the AC adaptor cord to prevent it from being disconnected.

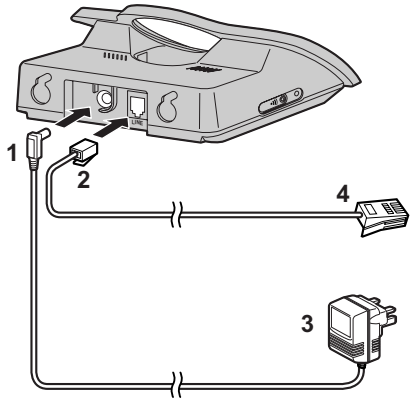

The AC adaptor must remain connected at all times (It is normal for the adaptor to feel warm during use).

- Never install telephone wiring during a lightning storm.

Battery Installation

Please ensure the batteries are inserted as shown. ⊖ part should be inserted first.
Close the cover as indicated by the arrow.

- When you replace the batteries, ⊕ part should be removed first.

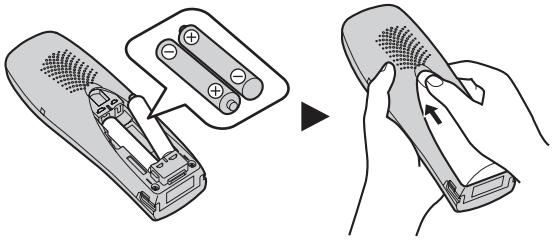

To replace the batteries:
Press the notch on the cover firmly and slide it as indicated by the arrow. Replace both batteries and close the cover then charge the handset for about 7 hours.

455E.book Page 5 Thursday, March 20, 2003 7:44 PM

Battery Charge

At the time of shipment, the batteries are not charged. To charge, place the handset on the base unit. **Please charge the batteries for about 7 hours before initial use.** During charging, the battery icon is as shown below.

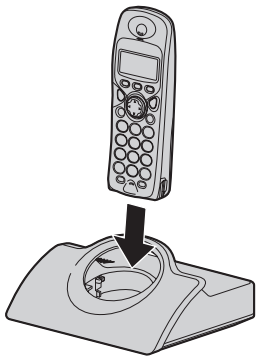

Fully charged **During charging**



Display icon	Battery strength
	High
	Medium
	Low
	Needs to be charged

The handset which power is off will be turned on automatically when it is placed on the base unit.
In normal use, the handset and the base unit should be turned on at all times.

Battery Life

Battery life is dependent on use and conditions but in general when using fully charged Ni-MH batteries (700 mAh):
Talk time: 10hrs approx.
Standby time: 120hrs approx.
When using Ni-Cd batteries (250 mAh):
Talk time: 4hrs approx.
Standby time: 40hrs approx.
(Times indicated are for peak performance)
The batteries reach peak performance after several full charge/discharge cycles.
The batteries cannot be overcharged unless they are repeatedly removed and replaced.
If battery life is shortened then please check that battery and charge terminals are clean.
For maximum battery life, it is recommended that the handset not be recharged until the battery icon flashes .

Setting up

Symbols Used in This Operating Instructions

Symbol	Meaning
	To search for the desired item, press **UP** or **DOWN**.
	To select the desired item, press **RIGHT**.
	To search for and then select the desired item, press **UP** or **DOWN** then **RIGHT**.
	To move the cursor to the right or to the left, press **RIGHT** or **LEFT**.
➧	To go to the next step.
" "	The words in " " indicate the words in display.

Replacing the Batteries

If the icon flashes after a few telephone calls even when the handset batteries have been fully charged, both batteries must be replaced.

Charge new batteries for approximately 7 hours before initial use.
(The telephone line cord must not be connected to the telephone socket at this time.)

When replacing the batteries, ensure that the correct battery type is selected.

Selecting the Battery Type

1
Press **MENU**.

2 
Search/Select "Setting Handset".

3 
Search/Select "Other Option".

4 
Search/Select "Battery Type".

5 
Search/Select "Ni-Cd" or "Ni-MH".

- To exit the operation, press any time.
- Do not use non-rechargeable batteries. If non-rechargeable batteries are fitted and start charging, it may cause the leakage of the battery electrolyte.

Please use only Panasonic P03P(Ni-MH) or P03H(Ni-Cd) batteries.

455E.book Page 7 Thursday, March 20, 2003 7:44 PM

Location of Controls

Handset

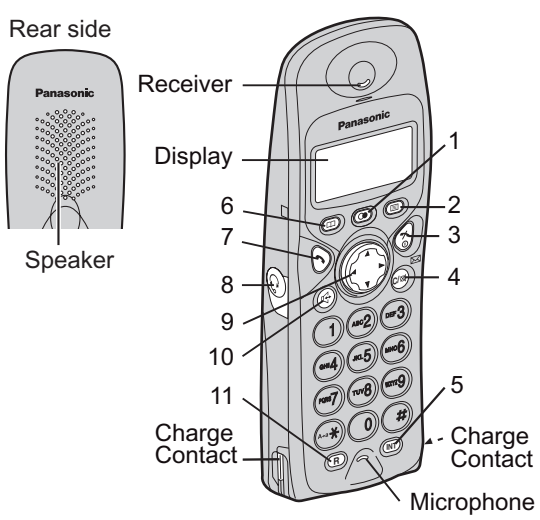

1 - **REDIAL/PAUSE** Button
2 - **MENU/OK** Button
3 - **OFF/POWER** Button
4 - **CLEAR/MAIL/MUTE** Button
5 - **INTERCOM** Button
6 - **PHONEBOOK** Button
7 - **TALK** Button
8 - **Headset Jack**
9 - Navigator Key
10 - **SPEAKERPHONE** Button
11 - **RECALL** Button

Base unit

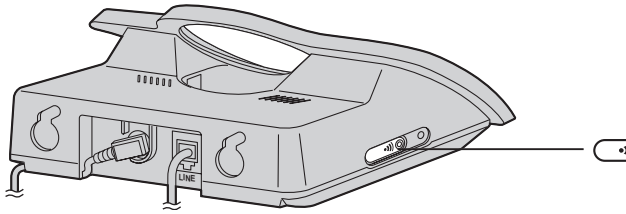

PAGE Button and Indicator

Handset Display

- Within range of a base unit
- Out of range/No registration/ No power on base unit
- Paging
- Making or answering calls
- Battery strength is low.
- Battery strength is high.
- Call Bar On (p.34)
- Direct Call On (p.35)
- [X] Key Lock On (p.36)
- SMS mail icon
- An SMS mail (text message) has arrived. If flashing quickly, SMS memory is full.

Using the Telephone

Power On/Off

Power on

Press for more than 2 seconds. *1

Power off

Press for more than 2 seconds. *2

*1 When button is released, the display changes to the standby mode.
*2 The display goes blank.

Setting the Clock/Date

After a mains power failure the clock needs to be reset. Ensure that the icon is not flashing.

1 Press **MENU**.

2 Search/Select "Setting Base". ➧ "Input Command"

3
Time
➧ Enter time. 4-digit.*1 ➧ Select AM or PM.*2
OR
Date
twice ➧ Enter day, month then year.*3

4 Press **OK**.

- To exit the operation, press any time.

*1 You can enter the time in 12 hour clock or 24 hour clock.
For example, to set 7:15 (12 hour clock), press 0 7 1 5.
If you enter the time in 24 hour clock, go to step **4**.
*2 If AM or PM is not selected, display will show 24 hour clock even if the time has been entered in 12 hour clock.
*3 For example, to set the 16th of February, 2003, press 1 6 0 2 0 3.

Making a Call

Pre-dialling

1 **Phone Number** *1 **2** Press **TALK**.*2

Post-dialling

1 Press **TALK**.*2 **2** **Phone Number**

*1 If you need to make a correction, press **CLEAR**. The digit is cleared to the left, then you can enter numbers. All digits are cleared if you press and hold **CLEAR**.
*2 You can also press **SPEAKERPHONE** to make a call.

Answering a Call

Press **TALK**. *1

Terminating a Call

(During a call)
Press **OFF**.

*1 You can also answer a call by pressing a dialling button, **INTERCOM**, #, * or **SPEAKERPHONE**.

Auto Talk

If you set Auto Talk to on, you can answer the phone by lifting the handset off the base unit.

1	2	3	4	5
Press **MENU**.	Search/Select "Setting Handset".	Search/Select "Other Option".	Search/Select "Auto Talk".	Search/Select "ON" or "OFF".

- To exit the operation, press any time.

Temporary Bell Off

When an external call is ringing, you can temporarily turn off the handset ringer. This function will not work when the handset is on the base unit or if an internal call is ringing.

Press and hold **DOWN** for over 1 second.

Receiver Volume/Speaker Volume

During a call, press **UP** or **DOWN** to change the receiver/speaker volume setting. There are 6 levels for speaker volume, and 3 levels for receiver volume.

(During a call)
Press **UP** or **DOWN**.

Using the Telephone

Handset Locator/Paging

You can locate a misplaced handset by paging it.

1 Press on the base unit. **2** All registered handsets ring for 1 minute.

<To stop paging>

3 Press on the base unit **OR** *1 on one of the handsets.

*1 You can also stop paging by pressing a dialling button, **INTERCOM**, #, ✱ or **SPEAKERPHONE**.

Speakerphone

Have a Hands-Free Phone Conversation (using Digital Speakerphone)

Handsfree allows you to talk to your caller without holding the handset and allows other persons in the room to listen to the conversation.

1 Press **SPEAKERPHONE**. **2** **Phone Number** **3** Press **OFF** to finish conversation.

- For best performance, please note the following:

- Talk alternately with the caller in a quiet environment.
- If either party has difficulty hearing, press **UP** or **DOWN** to change the volume accordingly. The choices for the receiver (or headset receiver) volume are 3 levels, and 6 levels for speakerphone volume.
- During a conversation you can switch to hands-free by pressing **SPEAKERPHONE**. To switch back to the receiver, press **TALK** or **SPEAKERPHONE**.

Turning the Mic On/Off

During a telephone conversation, you can mute the mic. When the mic is turned off, it disables the caller from hearing your conversation. This feature is useful if you want to say something to someone in the same room as yourself without the caller being able to hear your conversation.

(During a call) **1** C/⊠ Press **MUTE** to turn the mic off. **2** C/⊠ Press **MUTE** to return to the conversation. **3** Press **OFF** to finish conversation.

Redialling

The last 10 numbers dialled are stored in the redial list automatically.

Dialling with the Redial List

1 Press **REDIAL**.*1
2 Search for the desired dialled item.
3 Press **TALK**.*2

Dialling the Last Number Dialled

1 Press **TALK**.*3
2 Press **REDIAL**.

Editing the Dialled Number in the Redial List

1 Press **REDIAL**.*1
2 Search/Select the desired dialled item.
3 Search/Select "Edit For Call".
➧ The 1st digit of the desired dialled number blinks.
4 Move the cursor.
5 Press **CLEAR**.*4
AND/OR
Number Edit the phone number.*5
6 Press **TALK**.*2
OR
Press **OK** twice to store the number.
➧ **Name**
Follow from step **3** on page 14.

Clearing One/All Dialled Item(s) in the Redial List

1 Press **REDIAL**.*1
2 Search/Select the desired dialled item.
3 Search/Select "Clear" or "All Clear".
4 Search/Select "YES".

- To exit the operation, press ⏻/C any time.

*1 If there is no item stored in the redial list, the display shows "No Stored Memory".
*2 You can also press **SPEAKERPHONE** to make a call.
*3 If the other party's line is busy, the call is redialled automatically when dialling with **SPEAKERPHONE** (Auto Redial). When using Auto Redial, press **SPEAKERPHONE** again after pressing **REDIAL** if the muting has not be cancelled.
*4 Digits are cleared to the left of the flashing digit.
*5 Digits are added to the left of the flashing digit. If you need to clear and/or add more than one number, repeat from step **4**.

Caller ID

Caller ID Service

Caller ID is a service of your Network provider and will only operate if you have subscribed to this feature.
After subscribing to Caller ID, this phone can display a caller information.
If your unit is connected to a PBX or a telephone line that does not support this service, you will not be able to use it.
Caller ID does not display caller information while using the handset for an intercom call. However, the caller information will be stored to the Caller ID List.
Call Waiting: Call Waiting is a service of your Network provider and will only operate if you have subscribed to this service.
After subscription, your handset displays a second caller's phone number while talking and a Call Waiting tone is heard.
You can answer the second call, keeping the first call on hold.
Please consult your Network provider for details of this service.

Caller ID Display

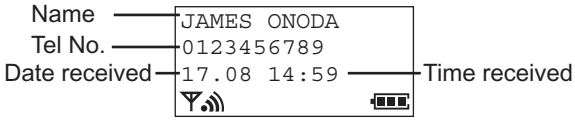

When receiving a call, the display shows the caller's phone number.
For example, a caller whose phone number is 0123456789 has been received.
If you store a phone number with a name in the phonebook, the display also shows caller's name when receiving a call.



If the caller has requested not to display his/her information, the display shows "Private Caller".

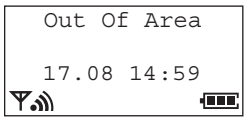

If the caller dialled from an area which does not provide Caller ID service, the display shows "Out Of Area".

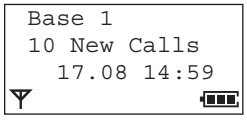

When new calls have been received, the display shows the number of calls.
In the example on the left, 10 new calls have been received.

455E.book Page 13 Thursday, March 20, 2003 7:44 PM

Caller ID List

Information from up to 50 different callers is stored from the most recent call to the oldest call in the caller list. When the 51st call is received, the oldest caller information is cleared.
If you receive a call from the same phone number you stored with name in the phonebook, the display will show the caller's name.

Calling Back

1 Search for the desired received item.*1

2 Press **TALK**.*2

Editing a Received Number in the Caller List

1 Search/Select the desired received item.*1

2 Search/Select "Edit For Call".

The 1st digit of the desired received number blinks.

3 Move the cursor.

4 Press **CLEAR**.*3

AND/OR

Number Edit the number.*4

5 Press **TALK**.*2

OR

Press **OK** twice to store the number.

Name
Follow from step **3** on page 14.

Clearing One/All Received Item(s) in the Caller List

1 Search/Select the desired received item.*1

2 Search/Select "Clear" or "All Clear".

3 Search/Select "YES".

- To exit the operation, press any time.

*1 If there is no item stored in the caller list, the display shows "No Stored Memory". When you answer a call, the caller information is stored in the list with a "✓" next to it. A "✓" will also be displayed next to an item after you have viewed it in the caller list.
*2 You can also press **SPEAKERPHONE** to make a call.
*3 Digits are cleared to the left of the flashing digit.
*4 Digits are added to the left of the flashing digit. If you need to clear and/or add more than one number, repeat from step **3**.

Phonebook

You can store information from up to 200 callers in the phonebook. If you subscribe to caller ID and you receive a call from the same phone number you stored with a name in the phonebook, the display will show the caller's name.

Private Category Feature
You can categorise caller information in the phonebook. There are 9 categories available. For example, category 1 can be used to save all friends' numbers. For each category, you can select one of 20 ringer types (see "Handset Settings"). **This feature is only available after subscription to Caller ID.** Please contact your Network provider for further information.

Storing a Caller Information

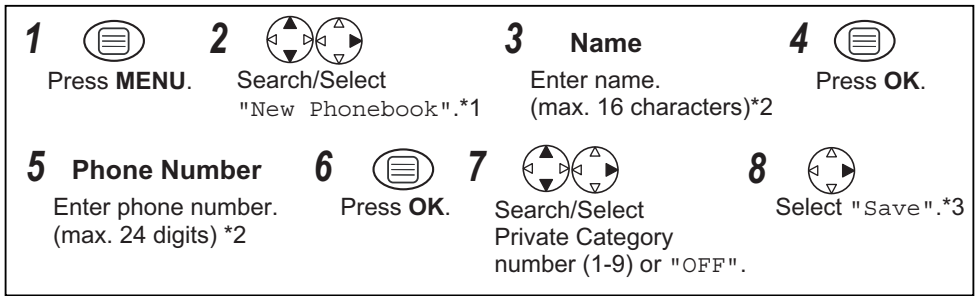
1 Press MENU.
2 Search/Select "New Phonebook".*1
3 Name Enter name. (max. 16 characters)*2
4 Press OK.
5 Phone Number Enter phone number. (max. 24 digits) *2
6 Press OK.
7 Search/Select Private Category number (1-9) or "OFF".
8 Select "Save".*3

- To exit the operation, press ⏻ any time.

*1 The display shows the number of phonebook space available. If "Memory Full" is displayed, the phonebook is full. To store, clear other stored items in the phonebook.

*2 If you need to make a correction, press **RIGHT** or **LEFT** to move cursor then clear the character/digit by pressing **CLEAR**, and/or enter characters/digits. Characters/digits are cleared or added to the left of the flashing character/digit. To enter characters, see page 17.

*3 To continue storing another caller information, repeat from step **3**.

To change capital or lower case letters
Example: Enter the name using the letters on the keypad. For example, to enter Anne:



- Pressing * changes between upper and lower case.

To change the Character Mode

You can select one of 6 character modes by pressing **PHONEBOOK** while entering a name. The factory preset is “ABC”.

For the full character map, see Phonebook Character Table (p.17).

1 Press **MENU**.

2 Search/Select "New Phonebook".

3 **Name**
Enter name. (max. 16 characters)

4 Press **PHONEBOOK** while entering name.

5 Search/Select the desired character mode.

To enter Names/Characters in the phonebook

Button	Note
	Press to move the cursor.
0 to 9	Press to enter letters/numbers. (Items are added to the left of the cursor. If the cursor is at the beginning of a line, the item is added over the cursor.)
C/⌧	Press to delete characters. (Characters are deleted to the left of the cursor. If the cursor is at the beginning of a line, the first character will be deleted.) Press and hold to delete all characters.
A- a ✳	Press to change between upper and lower case.
0	Press to insert a blank space (except when in Numeric 0-9 character mode).
1	Press to insert a symbol (except when in Numeric 0-9 character mode).

- To enter two characters located on the same dialling button, enter the first character and then press **RIGHT** to move the cursor on one space to enter the next character.

Phonebook

Finding Items in the Phonebook

All phonebook items are stored in the following order: Alphabet Letter/Symbol/Number/ Telephone number (when a name is not stored).

1 Press **PHONEBOOK**. ➧ The first item is displayed. **2** Search for the desired item.*1

*1 Display order of characters

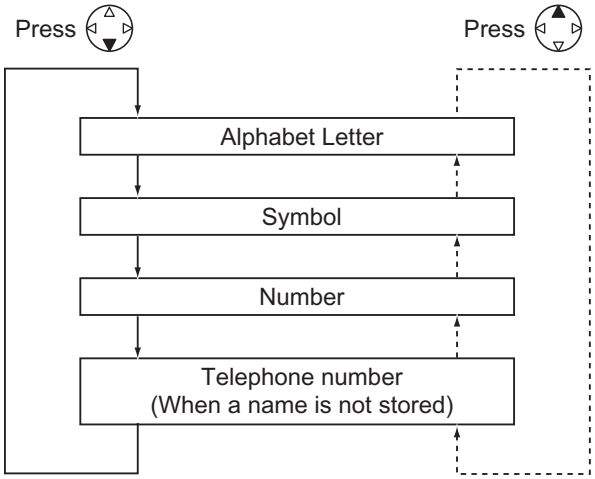

To Search for a Name by Initial
For example: “Felix”

1 Press **PHONEBOOK**. ➧ The first item is displayed. **2** Press dialling button 3 repeatedly until the first item under “F” is displayed. **3** Press **DOWN** until “Felix” is displayed.

455E(02).fm Page 17 Tuesday, March 25, 2003 7:46 PM

Phonebook Character Table

Buttons	ABC (Alphabet)	0–9 (Numeric)	АВГ (Greek)	AÄÅ (Extended 1)	SŠŠ (Extended 2)	АБВ (Russian)
1	# & ' ( ) ✳ , – . /	1	# & ' ( ) ✳ , – . /	# & ' ( ) ✳ , – . /	# & ' ( ) ✳ , – . /	# & ' ( ) ✳ , – . /
2 ABC	A B C	2	Α Β Γ	A À Á Â Ã Ä Å Æ B C Ç	A Á Ä Ą B C Ć Č	А Б В Г
	a b c			a à á â ã ä å æ b c ç	a á ä Ą b c Ć Č	
3 DEF	D E F	3	Δ Ε Ζ	D E È É Ê Ë Ē F	D Ď E É Ę Ě F	Д Е Ж З
	d e f			d e è é ê ë ē f	d ď e é Ę Ě f	
4 GHI	G H I	4	Η Θ Ι	G Ğ H I Ì Í Î Ï Ī Ĭ İ Ǐ	G H I Í	И Й К Л
	g h i			g ğ h i ì í î ï ī ĭ ı ǐ	g h i í	
5 JKL	J K L	5	Κ Λ Μ	J K L	J K L Ł Ĺ Ľ	М Н О П
	j k l			j k l	j k l Ł Ĺ Ľ	
6 MNO	M N O	6	Ν Ξ Ο	M N Ñ O Ò Ó Ô Õ Ö Φ	M N Ń Ň O Ó Ö Ő	Р С Т У
	m n o			m n ñ o ò ó ô õ ö ø	m n Ń ň o ó ö ő	
7 PQRS	P Q R S	7	Π Ρ Σ	P Q R S Ş ß	P Q R Ŕ Ř S Ś Š	Ф Х Ц Ч
	p q r s			p q r s Ş ß	p q r Ŕ Ř s Ś Š	
8 TUV	T U V	8	Τ Υ Φ	T U Ù Ú Ü Ũ V	T Ť Ú Ü Ű ů V	Ш Щ Ъ Ы
	t u v			t u ù ú ü ũ v	t Ť ú ü Ű ů v	
9 WXYZ	W X Y Z	9	Χ Ψ Ω ϗ	W Ŵ X Y Ý Z	W X Y Ý Z Ź Ż Ž	Ь Э Ю Я
	w x y z			w Ŵ x y ý z	w x y ý z Ź Ż Ž	
0	Space	0	Space	Space	Space	Space

- The following letters of Greek, Russian (Cyrillic), Polish, Czech and Slovakian are not available.
- Then same letter as capital (or small) will be displayed.
  ą ć č ď ę ě ł Í ľ ń ŕ ř Ş ś š ť ű Ů ŵ Ý Ŷ ź ż ž
- Press ✳ to change letter size; Capital > Small, Small > Capital.
- Press # to enter "#" (Numeric).

Phonebook

Editing Caller Information

1 Press **PHONEBOOK**.*1
2 Search/Select desired item.
3 Select "Edit".
➧ The 1st character of the desired name blinks.

<Name>

4 Move the cursor.
5 Press **CLEAR**.*2
AND/OR
Name Edit the name.*3
6 Press **OK**.

<Phone Number>

7 Move the cursor.
8 Press **CLEAR**.*4
AND/OR
Number Edit the phone number.*5
9 Press **OK**.

10 Search/Select Private Category number (1-9) or "OFF".
11 Select "Save".

Clearing Caller Information

1 Press **PHONEBOOK**.*1
2 Search/Select desired item.
3 Search/Select "Clear".
4 Search/Select "YES".*6

Dialling with the Phonebook

1 Press **PHONEBOOK**.*1
2 Search for the desired item.
3 Press **TALK**.*7

- To exit the operation, press any time.

*1 If there is no item stored in the phonebook, the display shows "No Stored Memory".
*2 Characters are cleared to the left of the flashing character.
*3 Characters are added to the left of the flashing character. If you need to clear or add more than one character, repeat from step **4**.
*4 Digits are cleared to the left of the flashing digit.
*5 Digits are added to the left of the flashing digit. If you need to clear or add more than one digit, repeat from step **7**.
*6 To continue clearing another caller information, repeat from step **2**.
*7 You can also press **SPEAKERPHONE** to make a call.

Storing a Phone Number (Pre-dialling/Redial List/ Caller ID List)

1 **<Pre-dialling>**
Phone Number *1 ➧ Press **RIGHT**.

1 **<Redial List>**
Press **REDIAL**.*2 ➧ Search/Select the desired dialled number.

2 Select "Save Phonebook".

3 **Name**
Enter name. (max. 16 characters)*3

4 Press **OK** twice.

5 Search/Select Private Category number (1-9) or "OFF".

6 Select "Save".

<Caller ID List>

1 Search/Select the desired received number.*2

2 Select "Save Phonebook".

3 **Name**
Follow from step **3** above.

- To exit the operation, press ⏻ any time.

*1 If you need to make a correction, press **CLEAR**. The digit is cleared to the left, then you can enter numbers.

*2 If there is no item stored in the redial/caller ID list, the display shows "No Stored Memory".

*3 If you need to make a correction, press **RIGHT** or **LEFT** to move cursor then clear a character by pressing **CLEAR**, and/or enter characters. Characters are cleared or added to the left of the flashing character. To enter characters, see Phonebook Character Table on page 17.

Phonebook

Hot Key

You can assign the dialling buttons 1 through 9 as hot keys. You can choose phone numbers from the phonebook.

Registering a Phone Number as a Hot Key

1 Press **PHONEBOOK**.*1

2 Search/Select desired item.

3 Search/Select "Reg. To Hot Key".

4 Search/Select desired dialling button number.*2

5 Select "Save".

Dialling with a Hot Key

1 Press and hold the dialling button registered as a hot key. **2** Press **TALK**.*3

Clearing Hot Key Registration

1 Press and hold the dialling button registered as a hot key. **2** Press **RIGHT**. **3** Select "Clear". **4** Search/Select "YES".*4

- To exit the operation, press any time.

*1 If there is no item stored in the phonebook, the display shows "No Stored Memory".

*2 If an item is already stored to a hot key, "✓" will be displayed on the left of the key number. If a hot key number with "✓" is selected, press **RIGHT** to select "Overwrite".

*3 You can also press **SPEAKERPHONE** to make a call.

*4 Phonebook registration will not be erased when hot key registration is cleared.

Phonebook Copy

You can copy phonebook information between handsets registered to the same base unit. The phonebook copy must be performed while in intercom mode.

To Copy an item/All items in the Phonebook

For example, Handset 2 is copying an item from its phonebook to Handset 1.

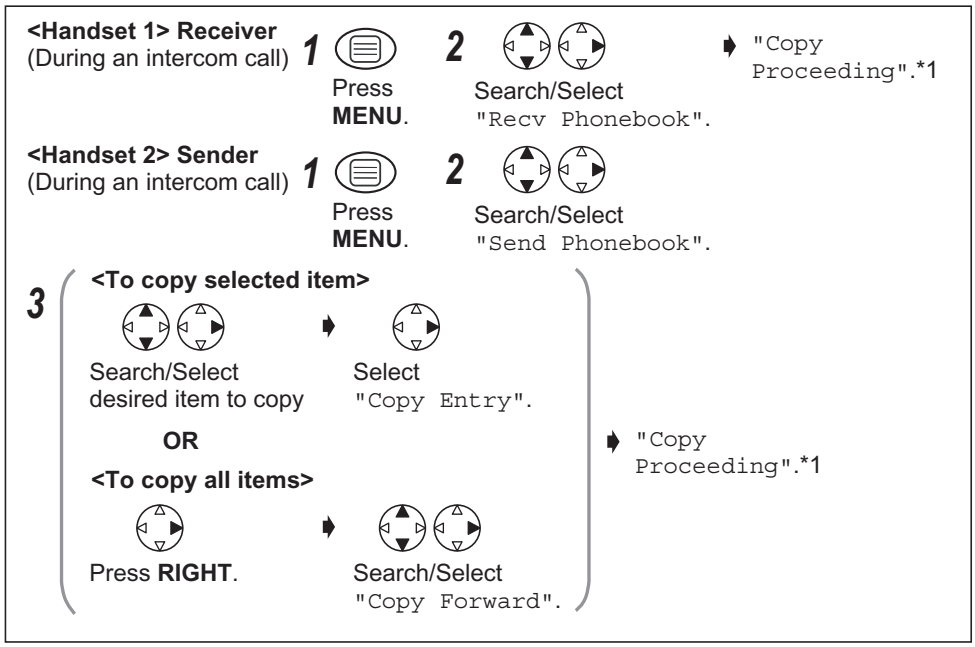

- To cancel copying at any time, press **CLEAR** to return to the intercom call or press ⏻ to return to the standby mode.

*1 If "Memory Full" is displayed, the receiver handset memory is full. When copying is completed, a beep sounds and "Copy Complete" is displayed. After a few seconds, the display will return to the intercom call. "Copy Incomplete" will display if the link is disconnected or if the receiver handset memory is full. If "Copy Failure" is displayed, the receiver and/or sender did not prepare for copying within 60 seconds.

SMS Feature (Text Messaging)

You can send and receive text messages between other landlines and mobile phones that also support a compatible SMS feature.
The SMS feature is only available after subscription to Caller ID.

Before sending your first text message, or to find out more information on SMS conditions and registration, please read your SMS Conditions (Text Messaging) for Bizzyline (Direct) Ltd. If you have any questions relating to the SMS Terms and Conditions, please call 09063020069. Calls are charged at 50p per minute. The helpdesk is open from 9.00am-5.30pm (Mon-Fri).
The SMS Network Provider described in these Operating Instructions is not available within the Republic of Ireland.
For further information, please contact the Customer Care Helpline No. : R.O.I. 01289 8333

Please note the following instructions when sending text messages between fixed lines and all mobile networks both national and international.

To Send a Text Message from Fixed Line to Fixed Line

There are no special requirements when sending a text message between fixed lines. Please follow the instructions under “Writing and Sending New Messages”.

To Send a Text Message from Fixed Line to Mobile

There are no special requirements when sending a text message between fixed line and mobile. Please follow the instructions under “Writing and Sending New Messages”. To enable the person receiving your message to reply, the server will insert your telephone number, within hash symbols, at the very end of your message. Eg. #01234 567899#. Please note: If you have used up the full 160 characters for your text message, your telephone number will overwrite the last letters of your message.

To Send a Text Message from Mobile to Fixed Line

There are special requirements when sending a text message from a mobile to a fixed line. If the mobile sender is unaware of the fixed line SMS providers requirements for sending a text message to a fixed line, please inform them of the following procedures.

Example: A Mobile is Replying to a Fixed Line Text Message

- **Select reply to message.**
- **Input your text message.**
- **Within the text message, enter the fixed line phone number.**
  The number can be added anywhere within the message but it must be entered with a hash at the beginning and end of the number.
  Eg. #01234 567899#
- **Select send.**

Example: Mobile is Writing/Sending a New Text Message to a Fixed Line

- **Input your text message.**
- **Within the text message, enter the fixed line phone number.**
  The number can be added anywhere within the message but it must be entered with a hash at the beginning and end of the number.
  Eg.#01234 567899#
- **Send the message (including number) to “Big Mobile” on: 07786 201010.**

Writing and Sending New Messages

You can write and send a new message. Each message can contain up to 160 characters.

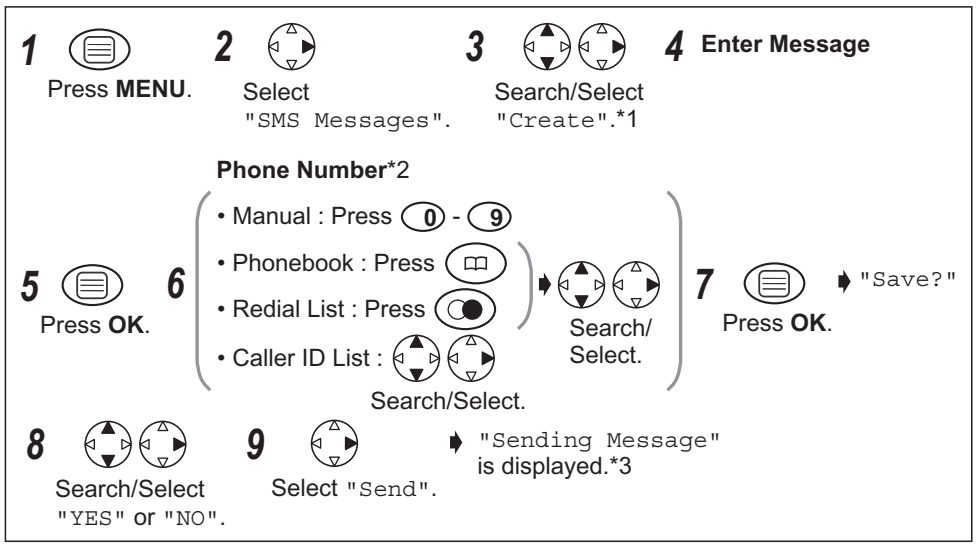

*1 If the base unit does not have sufficient memory to send a message, the display will show "SMS Lists are full. Please clear Messages". The unit will then return to the standby mode. Up to 50 messages can be stored.
- You can change the input mode. See “Selecting the Input Mode” (p. 24) for details.
- If the base unit can store one more message "Use Last Text?" is displayed. You can choose whether to use the last message or not. If you want to use the last message, press **UP** to recall the last message.

*2 You can enter a phone number manually, from the phonebook, Caller ID or redial lists.
- If you try to send a message using a number over 20 digits long from one of the lists, "Invalid Number" is displayed and the display returns to "Enter Phone No".

*3 The display returns to the standby mode, then "Transferring Message" is displayed.

SMS Feature (Text Messaging)

Text Entry

Button	Note
	Press to move the cursor.
0 to 9	Press to enter letters/numbers. (Items are added to the left of the cursor. If the cursor is at the beginning of a line, the item is added over the cursor.)
C/✉	Press to delete characters. (Characters are deleted to the left of the cursor. If the cursor is at the beginning of a line, the first character will be deleted.) Press and hold to delete all characters.
A- a	Press to change between upper and lower case.
0	Press to insert a blank space (except when in Numeric 0-9 character mode).
1	Press to insert a symbol (except when in Numeric 0-9 character mode).
	Press to insert a number while entering characters. While entering characters, press **REDIAL** and then the number you require. To change back to letter mode, press **REDIAL** again.

Selecting the Input Mode

There are 5 text input modes: “LetterWise®” (default mode), Normal (ABC), Greek (ΑΒΓ), Extended (AÄÅ) and Numeric (0-9).

(While inputting a message)

1 Press **PHONEBOOK**.

2 Search/Select desired mode.*1

*1 If “LetterWise®” is selected, you must select the language you require.
Press **UP** or **DOWN** to select language then press **RIGHT**. The display will return to the message.

SMS Feature (Text Messaging)

Entering Text in "LetterWise®" Mode
"LetterWise®" is the default input mode. "LetterWise®" is a simplified text entry system. This system suggests to the user the most likely letter to follow the text entered previously.

Inserting Text in "LetterWise®" Mode
• Enter the letters of the word you want by pressing dialling button (2) to (9).
• If the letter displayed is not correct, change the letter by pressing (#) (possibly several times).
• Continue writing the word always checking that the letters displayed are correct and change them if necessary.
• To insert symbols, press dialling button (1). If the symbol you want does not appear, press (1) repeatedly until the required symbol appears.

Reading/Displaying a Message in the Outgoing List

You can display all messages sent in time/date order. For this feature, you must set the clock and date.

1 Press **MENU**.
2 Select "SMS Messages".
3 Search/Select "Send List".
4 Search/Select desired message.
5 Scroll through the message.

- In the outgoing message list, if the telephone number of the person you sent the message to is over 16 digits long, you can view the remaining digits by pressing dialling button (3).

SMS Feature (Text Messaging)

Sending/Editing/Clearing a Message from/in the Outgoing List

You can send a stored outgoing message.

1 Press **MENU**.

2 Select "SMS Messages".

3 Search/Select "Send List".

4 Search/Select desired message.

5 Scroll through the message.

6 Press **RIGHT**.

7 Search/Select "Send", "Clear" or "Edit".

8

"Send": Follow the steps from **6** on page 23.

"Clear": Search/Select "YES". ➧ "CLEARED"

"Edit": Follow the steps from **4** on page 23.

Receiving a Text Message

When a new message is being received, the ✉ icon flashes on the display in the standby mode and a tone sounds. If the ringer volume is set to off, the tone will not sound. When the message has been received, the display shows the following:

When this message is displayed and any button is pressed, the display returns to the standby mode and the ✉ icon displayed.
When the SMS message memory is full, the ✉ icon will flash **quickly**. No messages can be received if the memory is full.

Displaying/Reading a Message in the Incoming List

There are two ways to display the incoming message list. These are through the menu and via a shortcut.

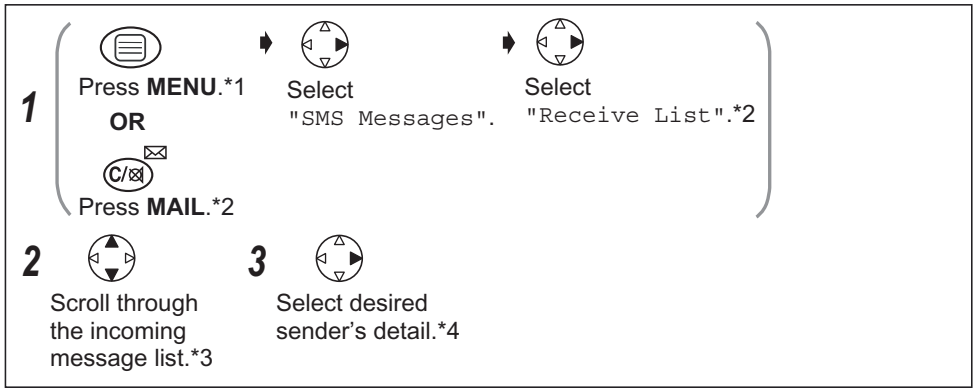

- If the phone contains unread messages, the ✉ icon will remain on the display in the standby mode.

*1 If "Received New SMS" is displayed, press **MENU** twice.

*2 Number of new and total messages received are displayed. If the list is accessed and no messages have been received, "No Stored Memory" is displayed. If the base unit does not have sufficient memory to receive a message, the display will show "SMS Lists are full. Please clear Messages".
The most recent sender's details are displayed. If the name and number have been stored in the phonebook, the name is displayed also. As SMS service provider may attach 1-digit number to the sender's phone number, the name may not be displayed even if the name and number have been stored in the phonebook.

*3 If there is a "✓" icon placed against the time, this means the message has previously been read/displayed.
If the sender's phone number is over 16 digits, you can view the remaining digits by pressing dialling button 3.

*4 Press **LEFT** to return to the list or press ⏻ to return to the standby mode.

SMS Feature (Text Messaging)

Before programming, please follow steps 1 to 2.

1 Press **MENU**. **OR** Press **MAIL**. → Select "SMS Messages". → Select "Receive List".

2 Search/Select desired message.

Clear/Reply/Edit Incoming Message(s)

3 Press **RIGHT**.

4 Search/Select "Clear", "Reply" or "Edit".

5 "Clear": Search/Select "YES". → "CLEARED"*1

"Reply": Follow from step **4** on page 23.

"Edit": Follow from step **4** on page 23.

Storing the Sender's Phone Number in the Phonebook

3 Press **RIGHT**.

4 Search/Select "Save Phonebook".

5 Then follow from step **3** of **<Pre-dialling>** or **<Redial List>** on page 19.

Calling Back the Message Sender

3 Press **TALK**. **OR** Press **SPEAKERPHONE**.

4 Press **OFF** to end the call.

*1 "CLEARED" is displayed then the display returns to the next message. If the message is cleared, "No Stored Memory" is displayed then the unit returns to the standby mode.

SMS Feature (Text Messaging)

Changing the SMS Service Centre Number

To send and receive SMS text messages, you need your SMS Message Centre telephone numbers.
Two numbers have been preset in your phone.
The phone number for SMS Message Centre 1 is used to SEND text messages while the number for Message Centre 2 is used to RECEIVE text messages.
You can change the preset numbers if required.

1 Press **MENU**. **2** Select "SMS Messages". **3** Search/Select "Parameters".
4 **4-digit Base Unit PIN***1 **5** Search/Select desired Message Centre.
6 **Message Centre Number** Enter Message Centre number. **7** Press **OK**. **8** Search/Select "Save".

*1 The factory preset is 0000.

For your reference, these are the numbers that have been preset in your phone.
Message Centre 1 : 0911 023 5029
Message Centre 2 : 0161274599

During promotional periods, you can send a message using Message Centre 3.
Promotional offers can include free SMS sending on the network.
Your SMS Service provider will inform you when promotional offers are available and will tell you what phone number is required to be saved for Message Centre 3. Store the number by following the procedure listed above.
When the number is saved, you then have to select Message Centre 3 in your base unit settings (Message Centre 1 is the default). To select Message Centre 3, please see below.

1 Press **MENU**. **2** Search/Select "Setting Base". ➧ "Input Command"
3 (3) **4** **4-digit Base Unit PIN***1 **5** (6) **6** (1) Message Centre 1 **OR** (3) Message Centre 3 **7** Press **OK**.

*1 The factory preset is 0000.

Please remember to change back to Message Centre 1 after the promotional period has ended.

SMS Character Table

SMS Character Table

"LetterWise®" Character Table

Buttons	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Character Displayed	. @ / : ; + - " , ! ¡ ? ¿ ( ) [ ] { } ' & % \ ^ ~ | < > = € £ $ ¥ ¤ § # ✳ _	ABC abc	DEF def	GHI ghi	JKL jkl	MNO mno	PQRS pqrs	TUV tuv	WXYZ wxyz

- Press 0 for space.
- Press ✳ to change letter size; Capital > Small, Small > Capital.
- Press # to show the next suggested character.

"Normal", "Numeric", "Greek" and "Extended" Character Table

Buttons	Normal (ABC)	Greek (ΑΒΓ)	Extended (AÄÅ)	Numeric (0–9)
1	. @ / : ; + - " , ! ¡ ? ¿ ( ) [ ] { } ' & % \ ^ ~ | < > = € £ $ ¥ ¤ § # ✳ _			1
ABC 2	ABC abc	ΑΒΓ	A À Á Â Ã Ä Å Æ B C Ç a à á â ã ä å æ b c ç	2
DEF 3	DEF def	ΔΕΖ	D E È É Ê Ë Ẽ F d e è é ê ë ẽ f	3
GHI 4	GHI ghi	ΗΘΙ	G Ğ H I Ì Í Î Ï Ĩ İ g ğ h i ì í î ï ĩ ı	4
JKL 5	JKL jkl	ΚΛΜ	J K L j k l	5
MNO 6	MNO mno	ΝΞΟ	M N Ñ O Ò Ó Ô Õ Ö Φ m n ñ o ò ó ô õ ö ø	6
PQRS 7	PQRS pqrs	ΠΡΣ	P Q R S Ş ß p q r s ş ß	7
TUV 8	TUV tuv	ΤΥΦ	T U Ù Ú Û Ü Ũ V t u ù ú û ü ũ v	8
WXYZ 9	WXYZ wxyz	ΧΨΩ	W X Y Z w x y z	9
0	Space	Space	Space	0

- Press ✳ to change letter size; Capital > Small, Small > Capital.
- The following letters of Greek, Russian (Cyrillic), Polish, Czech and Slovakian are not available. Then same letter as capital (or small) will be displayed.
  ą ć č ď ę ě ł Ĺ ľ ń ň ŕ ř ş ś š ť ű Ů ŵ Ỳ Ŷ ź ż ž

455E.book Page 31 Thursday, March 20, 2003 7:44 PM

Time Alarm

Before programming, please follow steps 1 to 3.

You must set the clock before setting the time alarm.

1 Press **MENU**.
2 Search/Select "Setting Handset".
3 Search/Select "Time Alarm".

Setting Alarm Time

4 Search/Select "Set Alarm Time".
5 **Time** Enter time. 4-digit (24 hour clock)
6 Press **OK**.
7 Select "Save".
8 Search/Select "OFF", "Once" or "Repeat Daily".

Setting Time Alarm On/Off

4 Search/Select "Alarm ON/OFF".
5 Search/Select "OFF", "Once" or "Repeat Daily".

- To exit the operation, press ⏻ any time.

To stop the time alarm: Time alarm will sound for 3 minutes. When the alarm sounds, press a dialling button, **TALK**, #, ✱ or **SPEAKERPHONE**. The alarm stops and display returns to the standby mode.
If "Once" is selected, the setting is turned off. When in talk or intercom mode, the alarm will not sound until the call is ended.

Handset Settings

Ringer Option

Before programming, please follow steps 1 to 3.

1 Press **MENU**.

2 Search/Select "Setting Handset".

3 Search/Select "Ringer Option".

Setting the Ringer Volume

The choices are 6 levels and off.

4 Search/Select "Ringer Volume".

5 Search/Select desired ringer volume.

- If "OFF" is selected, "Ring Off" is displayed.

Setting the Ringer Pattern for External Call/Internal Call/Paging/Alarm

There are 20 patterns available on each ringer.

4 Search/Select "Ext Ring Type", "Int Ring Type", "Paging Type" or "Alarm Type".

5 Search/Select desired ringer pattern.*1

Selecting the Ringer Pattern for Private Ring

4 Search/Select "Private Ring".

5 Search/Select desired category number (1-9).

6 Search/Select desired ringer pattern.*1

- To exit the operation, press any time.

*1 If you select one of the melody ringer pattern, it keeps ringing for 10 seconds even if a caller hang up a call. Therefore, you may hear dial tone or no one there after you answer a call.

Tone Option

You can set the following sounds on or off.

Key Tone: A key tone will sound when you press any key, and a confirmation tone and an error tone will be heard during operation.

Call Waiting Tone: A call waiting tone will sound when an incoming external call is received during an intercom call.

Range Warning Alarm: An alarm will sound when you move out of range of a base unit.

Battery Low Alarm: An alarm will sound when the batteries need to be charged.

1 Press **MENU**.

2 Search/Select "Setting Handset".

3 Search/Select "Tone Option".

4 Search/Select "Key Tone ON/OFF", "Call Waiting", "Range Alarm" or "Battery Alarm".

5 Search/Select "ON" or "OFF".

- To exit the operation, press ⏻ any time.

Display Option

Selecting the Standby Mode Display

1 Press **MENU**.

2 Search/Select "Setting Handset".

3 Search/Select "Display Option".

4 Search/Select "Standby Display".

5 Search/Select "Base Number"(Base unit number), "Handset Number"(Handset number) or "OFF".

- To exit the operation, press ⏻ any time.

Handset Settings

Before programming, please follow steps 1 to 3.

1 Press **MENU**.
2 Search/Select "Setting Handset".
3 Search/Select "Display Option".

Selecting the Talk Mode Display

Even if you select "Phone No", the length of the call will appear on your display when you receive calls.

4 Search/Select "Talk Display".
5 Search/Select "Talk Time"(Length of the call) or "Phone No."(Phone number).

Selecting the Display Language

4 Search/Select "Select Language".
5 Search/Select desired language.*1

- To exit the operation, press C any time.

*1 You can select one of 24 languages. If you set a language you cannot read, reset the handset to its initial settings. Press **MENU** ➧ **DOWN** ➧ **DOWN** ➧ **RIGHT** ➧ **UP** ➧ **RIGHT** ➧ **4-digit Handset PIN** ➧ **UP** ➧ **OK**
All handset setting will be reset to their initial settings (p.39), however, the Phonebook data will be saved.

Call Option

Call Bar On/Off

This allows you to make emergency and internal calls.

1 Press **MENU**.
2 Search/Select "Setting Handset".
3 Search/Select "Call Option".
4 Search/Select "Call Bar".
5 **4-digit Handset PIN***1
6 Search/Select "ON" or "OFF".*2

- To exit the operation, press C any time.

*1 The factory preset is 0000.
*2 If "ON" is selected, ✂ is displayed.

455E.book Page 35 Thursday, March 20, 2003 7:44 PM

Before programming, please follow steps 1 to 3.

1 Press **MENU**. **2** Search/Select "Setting Handset". **3** Search/Select "Call Option".

Setting the Direct Call Number

After a direct call number has been set and the feature has been turned on, you can dial the direct call number only by pressing **TALK**. Incoming calls are accepted.

4 Search/Select "Direct Call No.". **5** **Phone Number** Enter the direct call number. (max. 24 digits) **6** Press **OK** 3 times.*1

Setting the Direct Call On/Off

4 Search/Select "Direct ON/OFF". **5** Search/Select "ON" or "OFF".*1

- To exit the operation, press (0) any time.

*1 If "ON" is selected, "↦" is displayed.

Other Options

Changing Handset PIN

The factory preset is 0000. **Once you have programmed the handset PIN, you cannot confirm it. We recommend you write down the handset PIN. If you forget it, please consult our Panasonic Customer Care Helpline. U.K. 08700 100 076 R.O.I. 01289 8333**

1 Press **MENU**. **2** Search/Select "Setting Handset". **3** Search/Select "Other Option".

4 Search/Select "Change Hset PIN". **5** **Current 4-digit Handset PIN**

6 **New 4-digit Handset PIN** **7** **New 4-digit Handset PIN again to verify**

- To exit the operation, press (0) any time.

Handset Settings

Key Lock

You can lock the handset dialling buttons. Only incoming calls are accepted while the key lock is on. The key lock is cancelled when the handset is turned off.
When the key lock is on, emergency calls cannot be made until key lock is cancelled.

Key Lock On	Key Lock Off
Press **OK** for more than 2 seconds.	Press **OK** for more than 2 seconds.

- "[X]" is displayed and all dialling buttons are locked.

Recall Feature

RECALL is used to access special telephone services. Contact your Network provider for details. If your unit is connected to a PBX, pressing **RECALL** allows you to access some features of your host PBX such as transferring an extension call.

Dialling Pause (for PBX line/long distance service users)

A dialling pause is used when a pause in the dialling of the phone number is necessary using a PBX or accessing a long distance service.
EXAMPLE; When 9 (line access number) is dialled followed by a pause to access an outside line through a PBX:

1 (9)	2	3 Phone Number	4
	Press **PAUSE**.*1		Press **TALK**.*2

- Entering a pause prevents misdialling when you redial or dial a stored number.
- Pressing **PAUSE** once creates one pause. To extend the pause requirement time, press **PAUSE** accordingly.

*1 "P" is displayed on the LCD.
*2 You can also press **SPEAKERPHONE** to make a call.

Base Unit Settings

Before programming, please follow steps 1 to 2.

1 Press **MENU**. **2** Search/Select "Setting Base". ➧ "Input Command"

Changing Base Unit PIN

The factory preset is 0000. **Once you have programmed the base unit PIN, you cannot confirm it. We recommend you write down the base unit PIN. If you forget it, please consult our Panasonic Customer Care Helpline. U.K. 08700 100 076 R.O.I. 01289 8333**

3 5 **4 Current 4-digit Base Unit PIN** **5 New 4-digit Base Unit PIN**

6 New 4-digit Base Unit PIN again to verify

Call Restriction

You can restrict selected handset(s) from dialling selected phone numbers. You can assign up to 10 call restriction numbers (up to 8 digits). If you dial a restricted number, the call does not connect and the restricted number flashes.

3 6 **4 4-digit Base Unit PIN***1 **5 Handset Number** Select desired handset.*2 **6** Press **RIGHT**.

7 Phone Number Enter phone number to be restricted. (up to 8 digits) **8** Press **RIGHT**. **9** Press **OFF**.

OR

To continue entering call restriction numbers, repeat steps **7** and **8**. (up to 10 numbers)

Cancelling Call Restricted Handset(s)

3 6 **4 4-digit Base Unit PIN***1 **5 Handset Number** Select desired handset.*3 **6** Press **RIGHT**. **7** Press **OFF**.

- To exit the operation, press any time.

*1 The factory preset is 0000.
*2 The selected handset number flashes.
*3 The selected handset(s) will stop flashing.

Base Unit Settings

Before programming, please follow steps 1 to 2.

1 Press **MENU**. **2** Search/Select "Setting Base". ➧ "Input Command"

Cancelling Call Restricted Number

3 6 **4** **4-digit Base Unit PIN***1 **5** Press **RIGHT** repeatedly until desired call restriction number is displayed. **6** Press **CLEAR**.

7 Press **RIGHT**. **8** **<to continue>** Repeat the steps **5** to **7**. **OR** **<to finish>** Press **OFF**.

Time Break/Earth Recall

An earth relay can be installed as an option depending on your PBX requirements. Please consult our Panasonic Customer Care Helpline for installation. On installation, you can select the time break recall or earth recall mode to suit your PBX or Network provider.

3 3 **4** **4-digit Base Unit PIN***1 **5** 2 **6** 1 Time Break Recall *2 **OR** 2 Earth Recall **7** Press **OK**.

Pause Timing

You can set the pause time to 3 or 5 seconds, depending on your PBX requirements.

3 3 **4** **4-digit Base Unit PIN***1 **5** 3 **6** 1 3 Seconds **OR** 2 5 Seconds **7** Press **OK**.

- To exit the operation, press any time.
- The factory preset is in shade.

*1 The factory preset is 0000.
*2 "1-2" stands for 80 msec.

Reset Handset

You can reset all of the handset settings to their initial settings.

1 Press **MENU**.
2 Search/Select "Setting Handset".
3 Search/Select "Reset Handset".
4 **4-digit Handset PIN***1
5 Search/Select "YES" or "NO".

- To exit the operation, press any time.

*1 The factory preset is 0000.

Handset Initial Settings

Function	Initial Setting
Time Alarm Mode	OFF
Alarm Time	Clear
Handset Ringer Volume	3
Handset External Ringer Pattern	1
Handset Internal Ringer Pattern	1
Handset Paging Tone Pattern	1
Handset Alarm Tone Pattern	1
Key Tone	ON
Call Waiting Tone	ON
Range Warning Alarm	OFF
Battery Low Alarm	ON
Standby Mode Display	Base unit number
Talk Mode Display	Length of the Call
Display Language	English
Call Bar	OFF
Direct Call Mode	OFF
Direct Call Number	Clear
4-Digit Handset PIN	0000
Auto Talk	OFF
Base Unit Access	Automatic Base Unit Access
Redial Memory	All Clear
Handset Receiver Volume	Medium
Walkie-Talkie Setting	Group
SMS Text Input Mode	LetterWise®

Initial Settings

Reset Base Unit Settings

1 (MENU) Press **MENU**. **2** Search/Select "Setting Base". ➧ "Input Command" **3** (0) Press **0**.

4 **4-digit Base Unit PIN***1 **5** (OK) Press **OK**.

- To exit the operation, press (C) any time.

*1 The factory preset is 0000.

Base Unit Initial Settings

Function	Initial Setting
Ringer Mode	All Handsets
Number of Rings	3
Time Break/Earth Recall	Time Break Recall
Pause Timing	3 seconds
Call Restricted Handsets	All Clear
Call Restriction Numbers	All Clear
4-Digit Base Unit PIN	0000
SMS Message Centre Number	Message Centre 1
SMS Message Lists	All Clear

Handset Registration to a Base Unit

Handset Registration

The handset supplied with the base unit is already registered. If an optional handset is purchased, it must be registered. Additional **KX-A145E** handsets are available for purchase separately. Up to 6 handsets can be registered to a single base unit. Using additional handsets allows you to have an intercom call while simultaneously conducting a call to an outside line.

Handset registration must be completed within 1 minute after pressing the (•)) button. If over 1 minute, press (C) then start over again.

Charge the optional handset batteries for 7 hours before initial use.

1 Press **MENU**.

2 Search/Select "Setting Handset".

3 Search/Select "Registration". ➧ "Register H/set"

4 Press **RIGHT**.

5 **Press and hold (•)) on the Base Unit (for about 5 seconds) until the green indicator flashes.**
- If all registered handsets start ringing (Paging), press (•)) to stop paging then start over again.

6 Search/Select desired base unit number available to register the handset.

7 **4-digit Base Unit PIN after** "Enter Base PIN" **is displayed.***1

8 Press **OK**. ➧ When a handset is registered successfully, a confirmation tone sounds and the "Y" icon lights.

- To exit the operation, press (C) any time.
- To register the handset to more than one base unit, repeat from step **5** with the other base unit(s).

*1 The factory preset is 0000.

Multi-unit User Operation

Cancelling a Base Unit

You can cancel any base unit that your handset is registered to.

1 Press **MENU**.
2 Search/Select "Setting Handset".
3 Search/Select "Registration".
4 Search/Select "Cancel Base".
5 **4-digit Handset PIN***1
6 Search/Select desired base unit number to cancel.*2
7 Press **RIGHT**.
8 Search/Select "YES" or "NO".

Cancelling a Handset

Each handset can cancel itself or another handset.

1 Press **MENU**.
2 Search/Select "Setting Base".
➧"Input Command"
3 7
4 **4-digit Base Unit PIN***1
5 **Handset Number** Select desired handset.*3
6 Press **OK**.
➧Please wait until "Setting Base" is displayed.

- To exit the operation, press C any time.

*1 The factory preset is 0000.
*2 The selected base unit(s) is(are) marked with "✓".
*3 The selected handset number flashes.

Multi-unit User Operation

Before programming, please follow steps 1 to 4.

1 Press **MENU**. **2** Search/Select "Setting Base". ➧ "Input Command" **3** (1) **4** **4-digit Base Unit PIN***1

Ringer Mode Selection;
Setting the All Handsets Mode

5 (1) "All handsets" mode. **6** Press **OK**.

Setting the Selected Handsets Mode

5 (2) "Selected handsets" mode. **6** **Handset Numbers***2 Press desired handset numbers. **7** Press **OK**.

Setting the Selected then All Handsets Mode
The specific handset(s) will ring for a selected number of rings.
If not answered, all handsets will ring.

5 (3) "Selected then all handsets" mode. **6** **Handset Numbers***2 Press desired handset numbers. **7** Press **RIGHT**.
8 **Number of Rings***3 Select how many times it rings. (up to 6 rings) **9** Press **OK**.

- To exit the operation, press (C) any time.
- The factory preset is in shade.

*1 The factory preset is 0000.
*2 The selected handset number flashes.
*3 Press dialling button (1) through (6) to enter the number of rings.

Multi-unit User Operation

Base Unit Selection

When Automatic Base Unit Access is selected, the handset automatically searches for other registered bases if you move outside of the radio range of the current base unit. When a specified base unit is selected, the handset will access that base unit only. Calls (both incoming and outgoing) can be conducted only via the selected base unit, even if the radio cells overlap with neighbouring base units.

1	2	3	4
Press **MENU**.	Search/Select "Setting Handset".	Search/Select "Select Base".	Search/Select "Auto" or specific base unit number.

- To exit the operation, press ⏻ any time.
- Even if "AUTO" is selected, it is cancelled when the handset is registered to the other base unit.

Operating Additional Base Units: You can register and operate your handset with up to 4 base units. Each base unit forms 1 radio cell. If the individual bases are linked to the same telephone line then you can extend the operating range of the system by positioning the bases so that the two radio cells overlap. If the handset is set to AUTO base selection, then in standby mode the handset will automatically swap to the second base if the range on the first base is exceeded. It is not possible to transfer calls between bases (only between handsets linked to the same base unit).

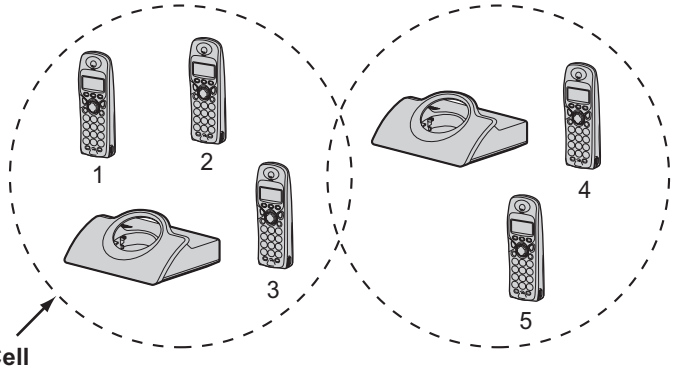

Example: Additional handsets (KX-A145E) registered with 2 base units.

Note: Calls are disconnected when the handset moves from one radio cell to another.

455E.book Page 45 Thursday, March 20, 2003 7:44 PM

Intercom between Handsets

You can use your handsets as a 2-way intercom.
For example, when Handset 1 calls Handset 2:

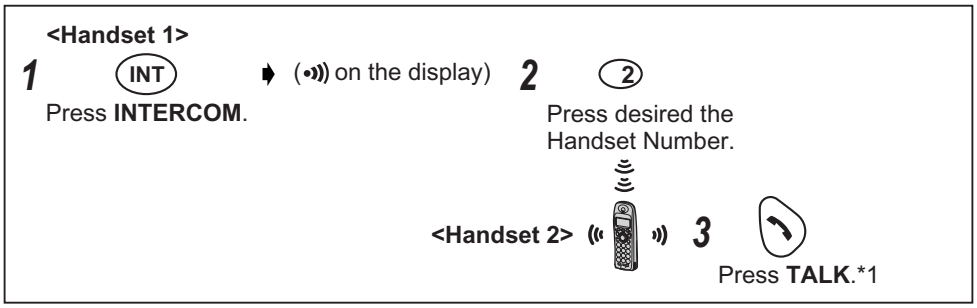

- To hang up, press .
- Intercom calls can be conducted within the radio cell of the current base unit, but not with units in neighbouring radio cells.

Transferring a Call to Another Handset/Conference Call

Intercom can be used during a call to transfer an external call between handsets that are registered to the same base unit. For example, when handset 1 transfers a call to Handset 2:

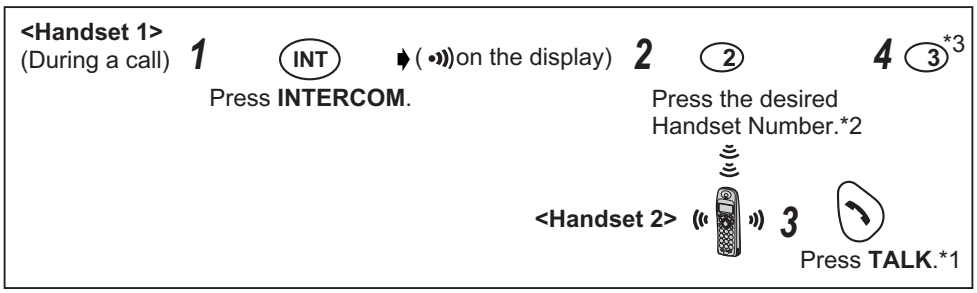

- To hang up, press .

*1 You can also press a dialling button, **INTERCOM**, #, * or **SPEAKERPHONE**.

*2 If you press after pressing the desired handset number, a call can be transferred to another handset without speaking to another handset.
If the transferred call is not answered within 30 seconds, Handset 1 will ring again.

*3 When Handset 2 answers a call transferred, press to complete a call transfer or press dialling button 3 to establish a conference call.

Walkie-Talkie

The Walkie-Talkie feature allows handsets to communicate with each other outside the range of the base unit. When the handsets are in Walkie-Talkie mode, external calls cannot be received. Only KX-A145E with Walkie-Talkie feature can communicate with one another. Talk time in this mode is approximately 6 hours.

Range:

The maximum range between two handsets whilst in Walkie-Talkie mode is up to 50 metres indoors and 300 metres outdoors.

Set the Walkie-Talkie Mode

You can set the Walkie-Talkie mode. There are two types. Common Base Station mode and Group mode. The factory preset is Group mode.

- In Common Base Station mode, communication is possible between handsets registered to a common base unit. If the handsets are registered to more than one base unit, the same base unit must be selected.

  Please note, the feature will not operate if AUTO is set in the base unit selection.

  If Common mode is selected and the handset is not registered to a base unit, an error tone sounds.
- In Group mode, communication is possible between handsets that are both set to this mode and whose Group ID's are common.
  This allows the handsets not to be dependent upon the base unit to which they are registered and can operate outside of the base unit range.

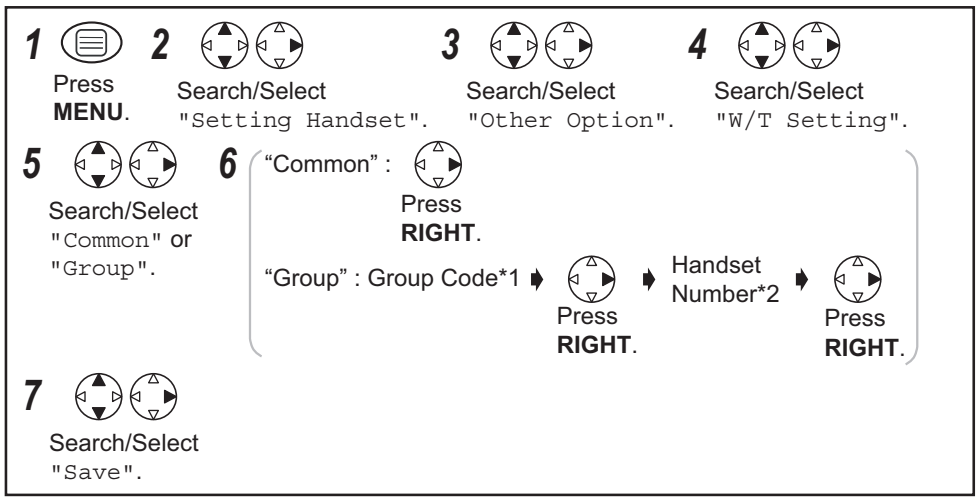

- To exit the operation, press any time.

*1 This can be 3 numbers of your choice. The default is 000. Make note of your code.

*2 The default is 1.

IMPORTANT: Each handset should have its own unique number.

455E.book Page 47 Thursday, March 20, 2003 7:44 PM

To turn the Walkie-Talkie Mode ON/OFF

To use the Walkie-Talkie feature, all handsets in conversation must be in Walkie-Talkie mode.

1 Press **MENU**.
2 Search/Select "Walkie-Talkie".
3 Search/Select "ON" or "OFF".*1

- To exit the operation, press ⏻ any time.

*1 When the Walkie-Talkie mode is ON, the handset number is displayed after “Walkie-Talkie” in the first line of the display.

Talking in Walkie-Talkie Mode

Before proceeding with this function, please ensure Walkie-Talkie mode is turned on, and the appropriate Walkie-Talkie mode has been selected.
For example, when Handset 1 is calling Handset 2:

<Handset 1>

1 Press **INTERCOM**.
OR
Press **TALK** .
OR
Press **SPEAKERPHONE**.

2 Press desired handset number.*1

<Handset 2>

3 Press **TALK**.*2

- To hang up, press ⏻.
- You can press **UP** or **DOWN** to adjust the volume while in Walkie-Talkie mode.

*1 The sender can input ✱ as a remote internal number. In this case all handsets in the same Walkie-Talkie mode are called.
*2 You can also press a dialling button, **INTERCOM**, #, ✱ or **SPEAKERPHONE**.

Using the Belt Clip

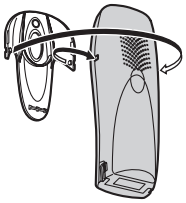

You can hang the handset on your belt or pocket using the belt clip.

Optional Headset

Plugging the optional headset into the handset allows hands-free phone conversations. Please use only the Panasonic KX-TCA89EX headset. To order, call the accessories telephone number on page 2.

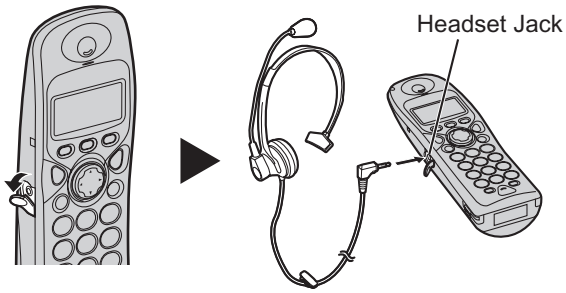

Connecting the optional headset to the handset
Open the headset jack cover, and connect the optional headset to the headset jack as shown.

Wall Mounting

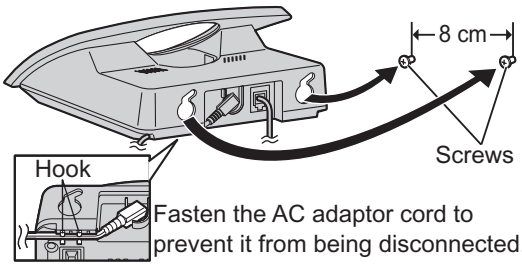

This unit can be mounted on a wall.
- Insert screws into the wall. The centre of the screw holes should be 8 cm horizontally apart.
- Connect the AC adaptor and the telephone line cord.
- Arrange the wires as shown, then mount the unit.

Wall Template

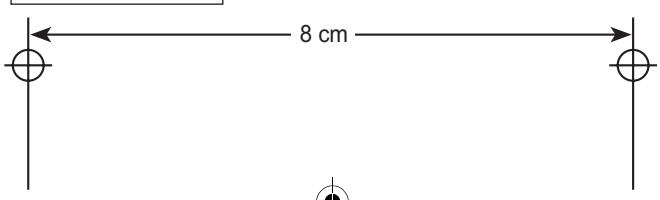

455E.book Page 49 Thursday, March 20, 2003 7:44 PM

Before Requesting Help

If you experience any problems with the normal use of your apparatus, you should unplug it from the telephone outlet and connect a known working telephone in its place. If the known working telephone still has problems, then please contact the customer service department of your Network provider.
If it operates correctly, then the problem is likely to be a fault in your apparatus.
In this case, contact your supplier for advice. Your Network provider may charge you if they attend a service call that is not due to an apparatus supplied by them.

Turn the power OFF then ON (Handset)/Disconnect then connect the AC adaptor (Base Unit).

Problem	Possible cause	Solution
Display is blank.	• Handset not turned on.	• Turn on power (p.8).
Handset will not turn on.	• Batteries not inserted. • Batteries not charged.	• Insert the 2 rechargeable batteries supplied (p.4). • Place handset on base and connect AC adaptor to base and AC outlet (full charge period 7 hrs).
Battery charge icon not counting up.	• Dirty charge contact. • Base not powered up.	• Clean charge/battery contact and retry charge. • Connect AC adaptor to base unit and AC outlet.
Y icon flashes.	• Handset not registered to base. • Handset out of range of base. • No power into base unit.	• Register handset to base. • Move handset closer to base. • Connect AC adaptor to base unit and AC outlet.
Handset busy tone heard when ( ) is pressed.	• Handset out of range of base. • Another handset in use.	• Move handset closer to base. • Wait for the other user to complete call.
No dial tone.	• Telephone line not connected.	• Insert telephone cord to network. • Turn power OFF then ON.
Cannot dial out.	• Call Bar set. • Particular dialled number is restricted. • Key lock mode ON.	• Turn feature off. • Remove number from call restricted list. • Turn key lock OFF.
Handset will not ring.	• Ringer switched off.	• Set ringer to one of 6 volume levels.

Before Requesting Help

Problem	Possible cause	Solution
Last number redial does not work.	• Number exceeded 24 digits.	• Redial manually.
No Caller ID number displayed.	• Service not supplied. • Caller has withheld info.	• Caller ID service must be arranged with Network provider.
icon flashes.	• Battery low.	• Recharge batteries.
icon has disappeared.	• Wrong battery type selected.	• Set the correct battery type.
Cannot register handset to base.	• Max. number of bases already registered to handset. • Max. number of handsets already registered to base unit. • Wrong PIN number entered (Default 0000). • Electrical noise in local area.	• Delete unused base registrations from handset. • Delete unused handset registrations from base. • If PIN number is lost, contact the Panasonic Customer Care Helpline. • Move base/handset away from sources of electrical noise (TVs, radios, etc.).
The beginning of the ring from external call may be a little delayed.	• For SMS feature is installed.	• It is normal.

SMS-Text Messaging

Problem	Possible cause	Solution
Cannot send a message.	• You have not subscribed to Caller ID. • SMS Centre number is not stored in your telephone. • Message was interrupted during sending.	• Caller ID service must be arranged with Network provider. • Store the number. • Wait until the message has been sent before using any other telephone functions.
Cannot send or receive a message.	• Memory is full.	• Clear messages in the Outgoing/Incoming lists.

Error Code	Description
FD	• Could not connect to the SMS Centre. Check that you have the correct SMS Centre numbers.
FE	• There was a problem sending the message.
EO	• Your number is permanently withheld or you have not subscribed to a Caller ID service.

Technical Information

Specifications

Standard:	DECT=(Digital Enhanced Cordless Telecommunications) GAP=(Generic Access Profile)
Number of channels:	120 Duplex Channels
Frequency range:	1.88 GHz to 1.9 GHz
Duplex procedure:	TDMA (Time Division Multiple Access)
Channel spacing:	1728 kHz
Bit rate:	1152 kbit/s
Modulation:	GFSK
RF Transmission Power:	approx. 250 mW
Voice coding:	ADPCM 32 kbit/s
Power source:	AC Adaptor 220 - 240 V, 50/60 Hz
Power consumption, base unit:	5 VA
Operating conditions:	5 - 40 °C, 20 - 80 % relative air humidity (dry)
Dimensions, Base Unit:	About (58 mm x 128 mm x 105 mm) x 170 g
Dimensions, Handset:	About (143 mm x 48 mm x 32 mm) x 120 g

- Specifications are subject to change.
- The illustrations used in this manual may differ slightly from the original device.

Connections: The telephone will not work during a power failure. We therefore recommend you use a standard telephone and T Adaptor to connect this Digital Cordless Phone to the line. Your Panasonic Sales Shop can offer you more information about connection possibilities.

“Eatoni and LetterWise are trademarks of Eatoni Ergonomics, Inc.”

455E.book Page 53 Thursday, March 20, 2003 7:44 PM

Index

AC Adaptor 2, 4
Accessories 2
Auto Talk 9

Base Unit
- Initial Settings 40
- PIN 37
- Reset 40
- Selection 44

Battery
- Caution 3
- Charge 5
- Installation 4
- Life 5

Battery Low Alarm 33

Call Restriction
- Cancelling Call Restricted Handset(s) 37
- Cancelling Call Restricted Number ... 38

Call Waiting 12
Caller ID List
- Calling Back 13
- Clearing 13
- Editing 13

Calls
- Answering 9
- Making 8, 11
- Redialling 11
- Terminating 9

Cancelling a Base Unit 42
Cancelling a Handset 42
Clock/Date 8
Conference Call 45

Dialling Pause 36
Direct Call Number 35
Display
- Standby Mode 33
- Talk Mode 34

Guarantee 54

Handset
- Display 7
- Initial Settings 39
- Locator 10
- Paging 10
- PIN 35
- Registration 41
- Reset 39
- Ringer 32

Intercom 45

Key
- Lock 36
- Tone 33

Making Calls
- Calling Back 13
- Redialling 11
- with the Phonebook 18

Phonebook
- Hot Key 20
- Storing 14, 19

Power On/Off 8

Range Warning Alarm 33
Recall 36
Receiver Volume 9
Ringer Pattern 32
Ringer Volume 32

Setting up 4
SMS Feature 22
Speakerphone 10
Specifications 52

Time Alarm 31
Time Break/Earth Recall 38
Tone Option 33

Walkie-Talkie 46

Guarantee

CONDITIONS OF GUARANTEE

This guarantee is in addition to and does not in any way affect any statutory or other rights of consumer purchasers. If within the applicable guarantee period, the appliance proves to be defective by reason of faulty design, workmanship or materials, we undertake subject to the following conditions to have the defective appliance (or any part or parts there of) repaired or replaced free of charge.

1. The appliance shall have been purchased and used solely within either the UK or ROI and in accordance with standard operating instructions and the technical and/or Safety Standards required in the UK.
2. The appliance should be returned together with this guarantee and proof of date of purchase promptly on being found defective at the purchaser's risk and expense to the authorised dealer from whom the appliance was purchased or to the nearest authorised dealer. All enquires must be through such dealers.
3. This guarantee shall not apply to damage caused through fire, accident, lightning, misuse, wear and tear, neglect, incorrect adjustment or repair, to damage caused through installation, adaption, modification or use in an improper manner or inconsistent with the technical and/or safety standards required in the country where this appliance is used, or to damage occurred during transit to or from the purchaser.
4. If at any time during the guarantee period any part or parts of the appliance are replaced with a part or parts not supplied or approved by us or of an objective quality safe and suitable for the appliance, or the appliance has been dismantled or repaired by any person not authorised by us, we shall have the right to terminate this guarantee in whole or in part immediately without further notice.
5. The purchaser's sole and exclusive remedy under this guarantee against us is for the repair or replacement of the appliance or any defective part or parts and no other remedy, including, but not limited to, incidental or consequential damage or loss of whatsoever nature shall be available to the purchaser.
6. This guarantee shall not apply to batteries and any other items of limited natural life.
7. Our decision on all matters relating to complaints shall be final. Any appliance or defective part which has been replaced shall become our property.
8. The guarantee period applicable to this product shall be 12 months.

Please keep these Operating Instructions with your receipt.

Panasonic Business Systems U.K.

Receipt No.	Date of Purchase
Model No. KX-TCD455E	Serial No.

455E.book Page 55 Thursday, March 20, 2003 7:44 PM

455E.book Page 56 Thursday, March 20, 2003 7:44 PM

Hereby, Panasonic Communications Co., Ltd., declares that this Dect Cordless Telephone is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the manufacturer's declaration of conformity to the essential requirements of the R&TTE Directive is available at the following
web address: http://doc.panasonic-tc.de

For your future reference

Serial No. Date of purchase

(found on the bottom of the unit)

Name and address of dealer

Attach or keep original receipt to assist with any repair under warranty.

Customer Care Helpline Tel. No.: U.K. 08700 100 076
R.O.I. 01289 8333

CE0436

1999/5/EC

This equipment is designed for use on the United Kingdom only.
In the event of problem, you should contact your equipment supplier in the first instance.

Technical specifications are subject to change.

Sales Department:
Panasonic Business Systems U.K.
Panasonic House, Willoughby Road, Bracknell, Berkshire, RG12 8FP

Panasonic Communications Co., Ltd.
1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

PQQX13447ZA D0303-0